

www.TheDetailSS.com
**99-02 GM TRUCK Double Din
Head Unit Install Kit**

Please read all instructions including the **install tips** first!

1. Disconnect the vehicle's battery.
2. Remove the dash bezel; Lower the tilt on the steering column to its lowest position, press your park brake fully, put the key in the ignition and turn it forward (but do not start the vehicle) and shift the vehicle into a low gear to allow room around the shift lever to remove the plastic panel. ****Keep your foot on the brake when taking vehicle out of park!!**** Very carefully, pull the dash panel straight out, starting at the top and it will pop loose. Fully remove the panel and place the vehicle back into PARK.
3. Remove the factory (or aftermarket head unit) from the vehicle.
4. Install your aftermarket double din head unit into the mounting bracket. Using the ISO install mounting holes and spacers provided if needed. You must provide and figure how long and what size of bolts to use for this! Too long of bolts can damage your head unit. TheDetailSS takes no responsibility for your errors!!



5. Install the aftermarket double din head unit / bracket assembly into the dash using the two 7mm bolts shown in the picture below.



6. The dash bezel now must be cut. When using the provided templates on the last pages of these instructions, if you produce a clean, straight cut you should not require a trim ring to be used on the head unit. Using a small reciprocating air saw or dremel, cut the dash using the provided template. This template will get an opening size of 3.85" x 6.72" (Some older head units may require a larger opening than this.) Cut the area out smaller first and sand the opening larger as needed, using your head unit and plastic fill tabs as a gauge. See pic below.



7. Install the dash bezel that you just cut, into the vehicle for a test fit. Use your head unit and plastic fill tabs as a gauge to determine correct fit and alignment of the fill tabs in the enlarged hole. The backside of the fill tabs have shoulders around the outside perimeter. These shoulders go behind the dash panel and provide a glue seam to bond the two plastics. Do not glue these in at this time!



8. Your head unit should be centered both horizontally and vertically within this opening and should not require the use of a head unit trim ring if the use of one is not desired.



9. Make any adjustments if needed and glue the dash fill tabs in place. Allow it to dry completely before attempting to reassemble the dash.



10. Using or recommended materials, plastic fill all seams or gaps on the front of the dash bezel and sand smooth. Paint to desire.
11. Reassemble your dash; Be careful when putting the dash bezel back on to not contact your head unit and scratch or damage the screen.

If you have purchased this item through E-bay please note: I will gladly leave you positive feedback immediately AFTER feedback is received for me so I know you are completely satisfied with your purchase.


If you have any questions feel free to contact me.

Anderson@TheDetailSS.com

Thank you,

Sean Anderson

99-02 GM TRUCK Dash
Upper Hole
Factory Head Unit Opening

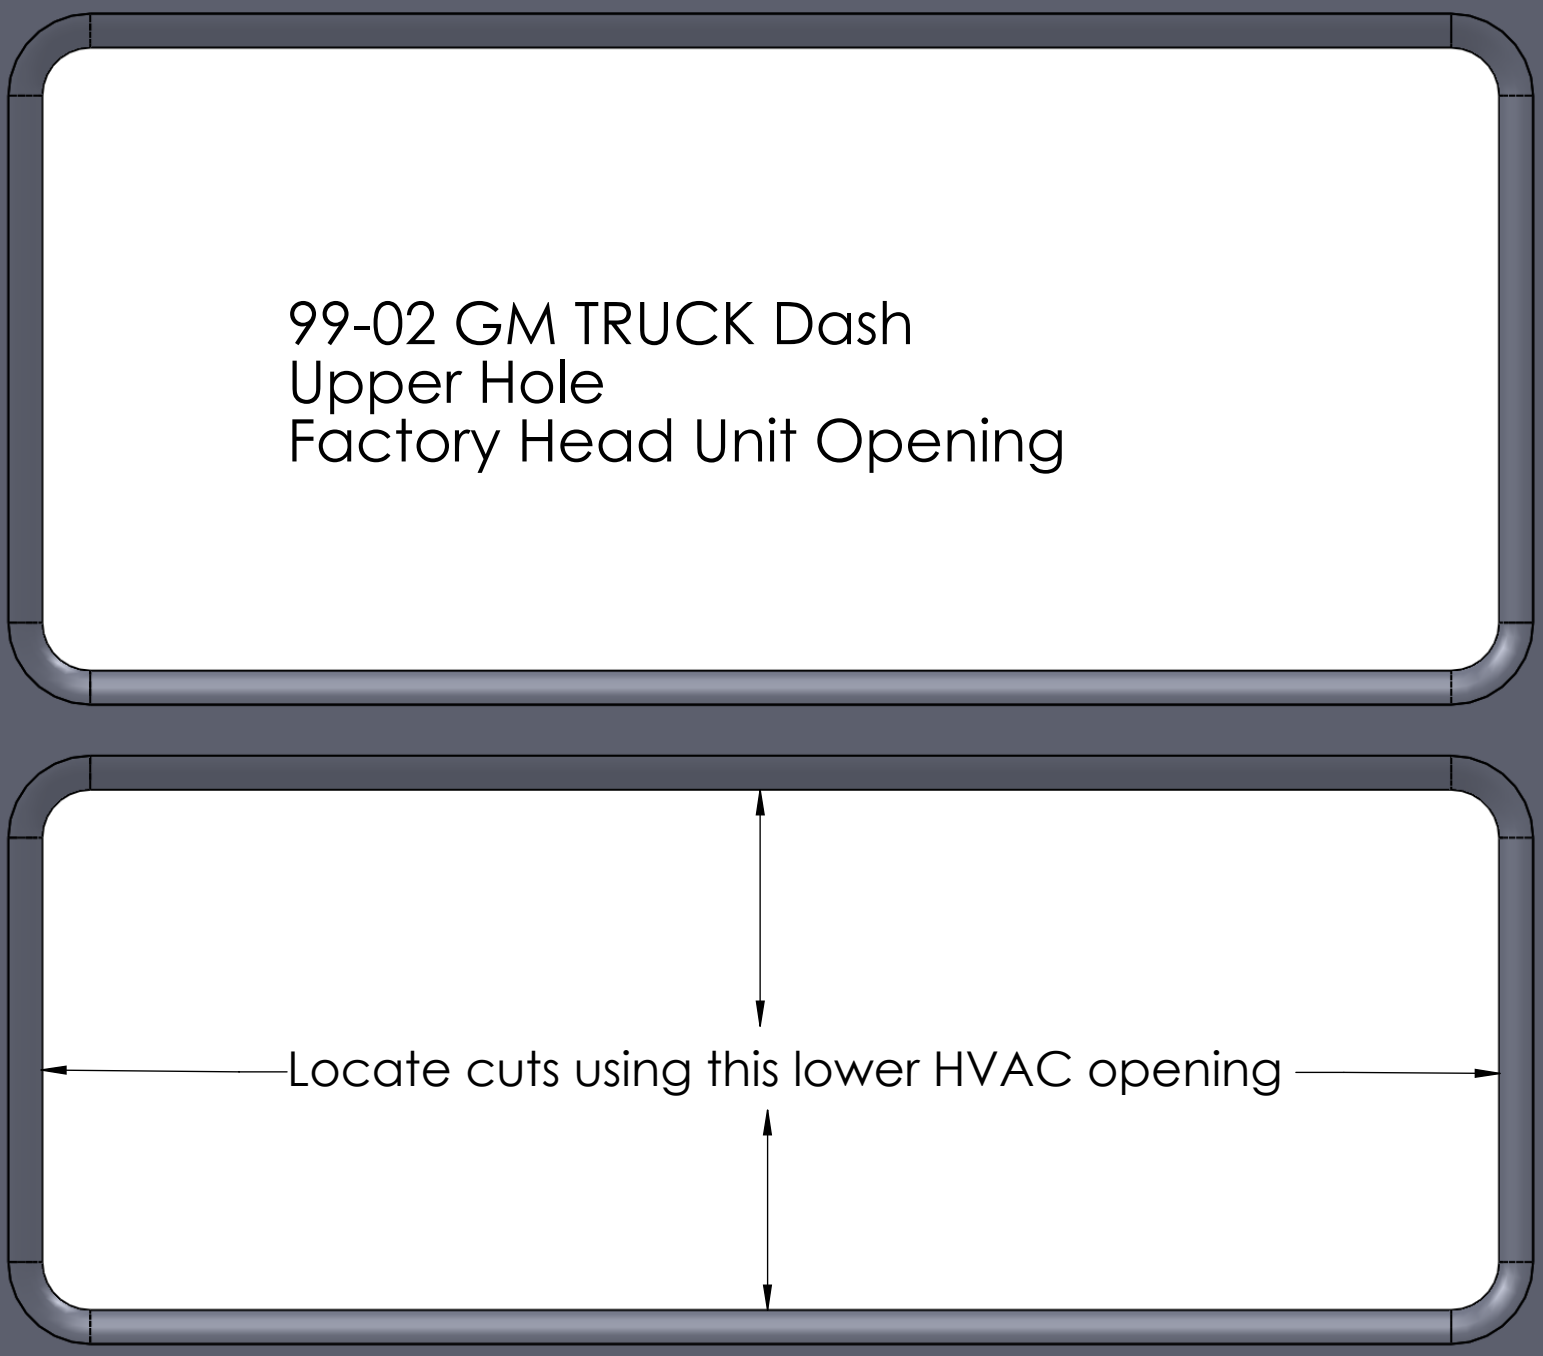

Locate cuts using this lower HVAC opening

